



AEG Electrolux FM72 Disassembly for cleaning

i had to clean the dust inside the closed dustbuster..

Written By: Kevin D



INTRODUCTION

hey everyone,

the normal maintainance of the dustbuster wasn't enough so i hat to open the dustbuster to clean it out.



TOOLS:

- [Philips extra long screw driver](#) (1)
 - [isesamo opening](#) (1)
 - [Air compressor](#) (1)
-

Step 1 — opening the device




- open the box, you'll open it to clean it on a normal base.
- clean the parts (non electronics) with hot water and a little soap, dry it afterwards

Step 2 — opening the electronic part




- now we will remove the electronic part of the dustbuster.
- remove the four screws as shown in picture 2.
- ⓘ you will need a long philips screwdriver to do this.
- remove the fifth screw at the bottom.

Step 3

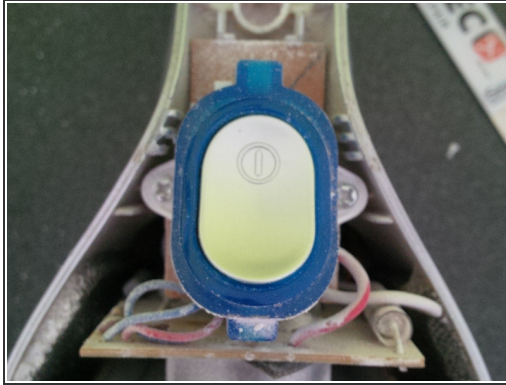

- gently pry the device open. use a isesamo opener.\
- now you can remove the I/O button.
- i only removed the screws , if you want to replace this you'll have to solder the wires tot the pcb.

Step 4 — cleaning electronics

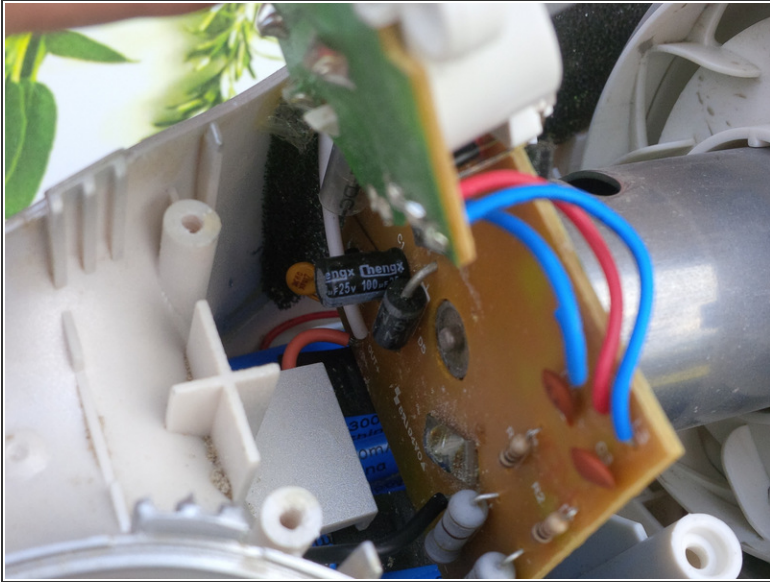

- now you can clean the dustbuster inside the electronic compartment.
- i used a air compressor to do it.
- in picture one, you can see the pcb's. and also under the pcb you'll see blue battery's. this are 2 x 3 AA battery recharable.
- second picture, if you have to replace the dustbag holder button. you do it by removing the 2 screws.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 03:23:39 PM.